




Assembly Instructions

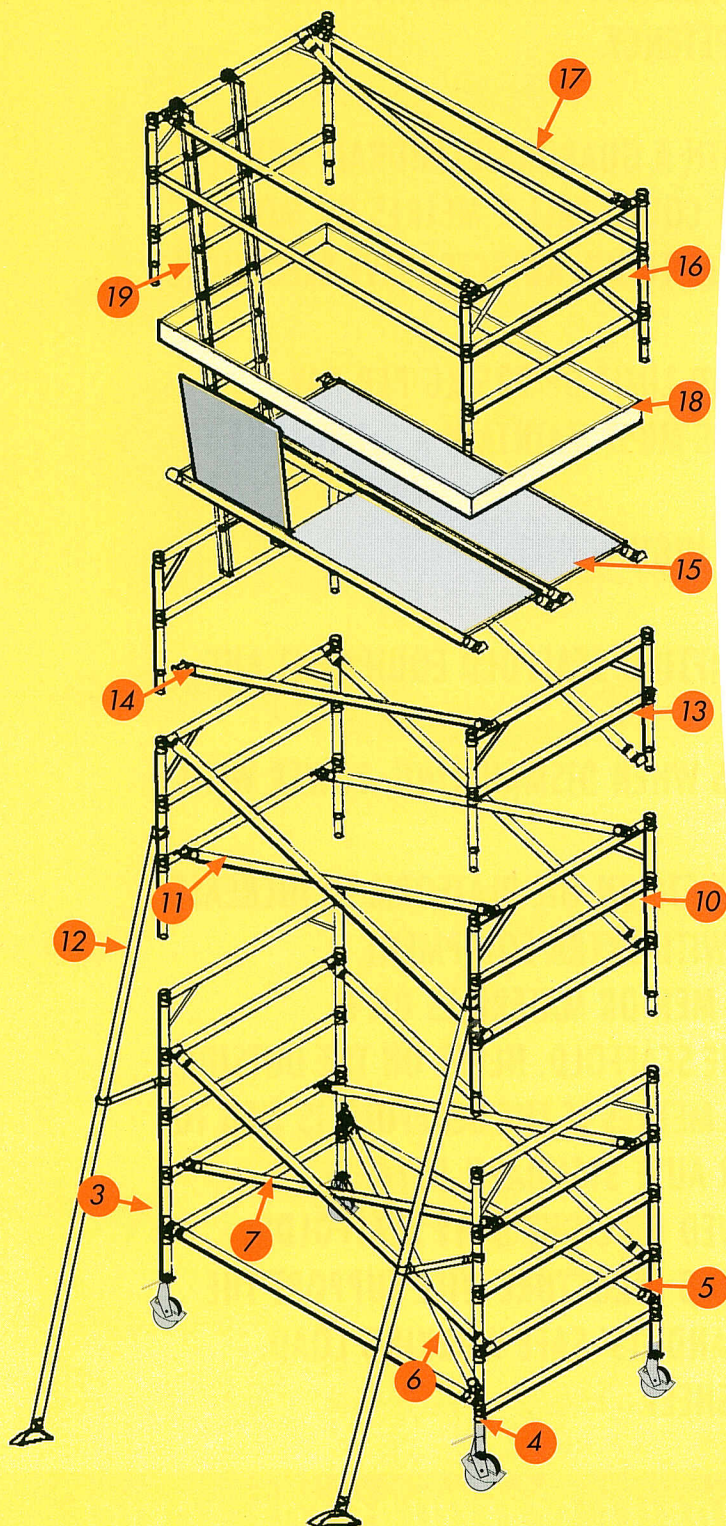

All scaffold over 4 metres high must be erected, altered or dismantled by a qualified scaffolder.

DOUBLE WIDTH
4M platform height

1. Read safety precautions before commencing.
2. Sort all components.
3. Stand a base frame upright and attach a horizontal brace (yellow) to the inside of the vertical tube of the base frame just above the castor, which should be locked. The frame is now self supporting.
4. Stand the other base frame and attach the other end of the brace (already fitted to the first frame) to it on the same side as the first frame.
5. Now fit a second horizontal brace to the other side of the frame similar to the first.
6. Fit 1 x plan brace (black) diagonally from corner to corner just above the yellow braces.
7. Install two diagonal braces to each side between the base frames to form a 'X'. These braces go between the 2nd and 4th cross member (transom) from the ground.
8. Level the unit by turning the tommy bars on each castor. This is best done with a spirit level.
9. The base is now complete.
10. Fit a 1.2M high frame into the top of both base frames.
11. Install two diagonal braces to each side between the frames to form an 'X'. These braces go between the top and bottom cross members (transom).
12. Attach outriggers to upright of 1.2M frame.
13. Fit a .8M high frame into the top of both frames.
14. Attach a diagonal brace to the top transom of the .8M frame, to the top transom of the 1.2M frame on both sides, one opposite hand to the other.
15. Place platform (as shown) on top of the two 0.8M high frames.
16. Fit a guard rail frame into the top of both frames.
17. Attach a horizontal brace (yellow) to the top cross member of the guard rail frame on both sides as a guard rail. Fit two more horizontal braces (yellow) as mid rails. Attach one diagonal brace from the top of the one guard rail to the bottom of the other guard rail for rigidity.
18. Install toe boards around the perimeter of the platform interlocking at each corner on the inside of the vertical tube of the guard rail, position long boards first then clip the short ones down on them.
19. Position the ladder through the platform with the trap door (safety hatch). Clip over the top of the guard rail frame and position stand off hooks onto an adjacent transom.
20. Your scaffold is now ready for use.

MOBILE SCAFFOLDS

217 Hanson Road
Athol Park South Australia 5012
ph: 08 8244 8500 fax: 08 8244 8505
email: mobscaff@senet.com.au
www.mobilescaffolds.com.au